




## NFK UNI Troubleshooting Guide


If the NFK UNI presents issues with not detecting when a screw is present/ not present at the front of the rail you can make the following adjustments after removing the front cover.

Adjusting the rail: Sometimes during shipping or initial set up the rail can move from the original pre-set position. Often the rail is too far out towards the front of the presenter and simply needs to be pushed back a small amount in order for it to properly line up with the sensors.


Rail:

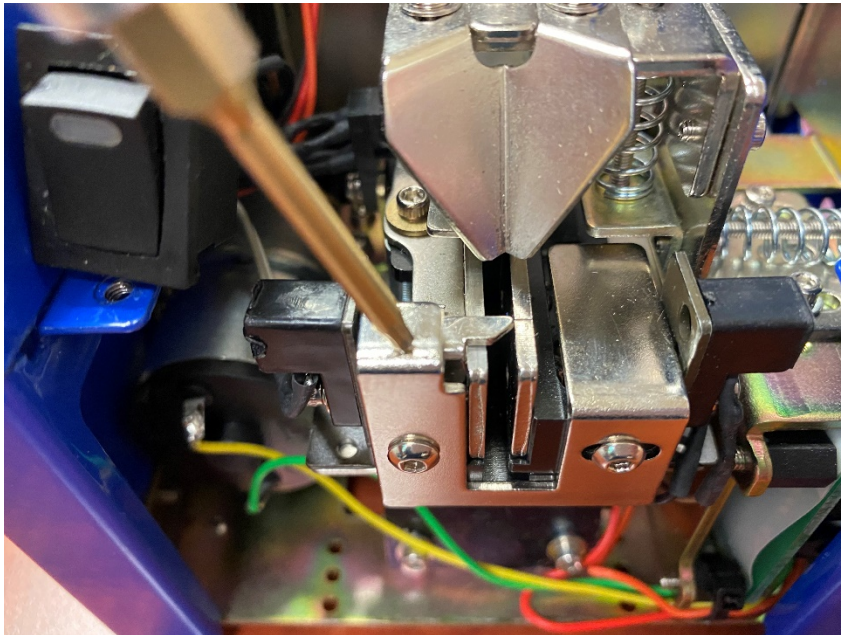


To adjust the rail, you want to loosen this screw:

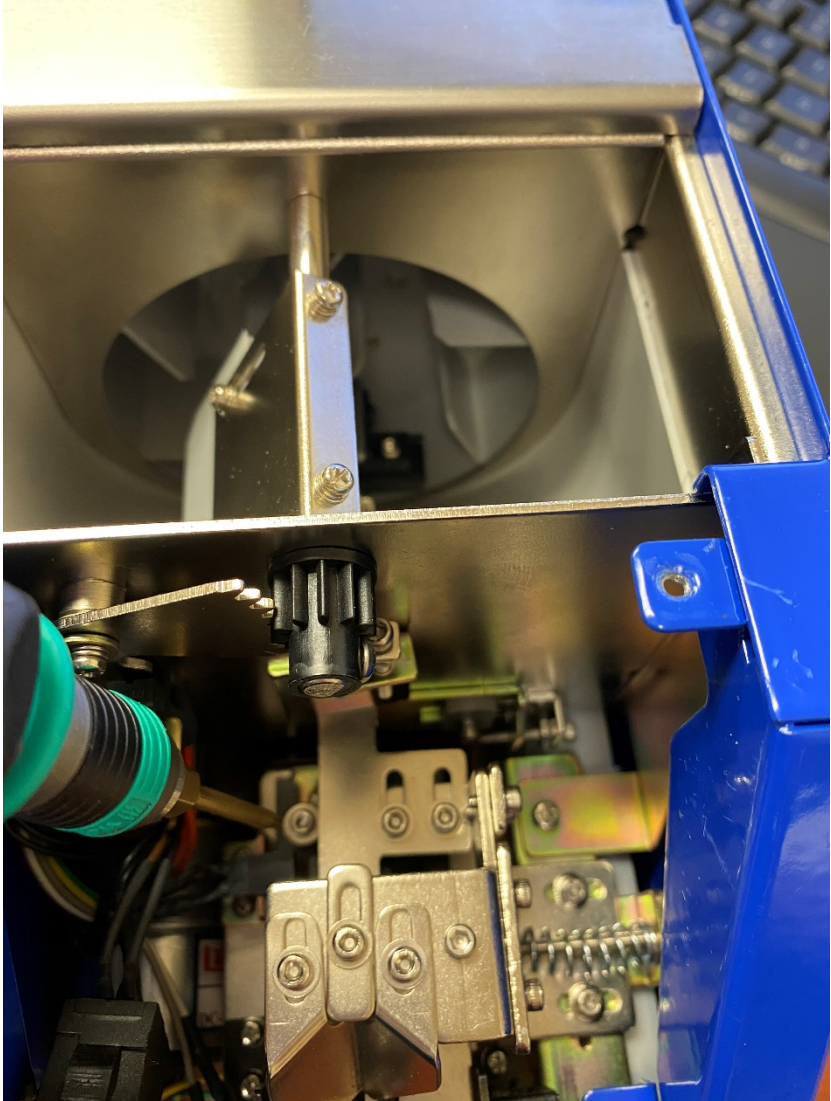

Once properly positioned fasten the screw again and turn the presenter on. If the issue continues you may need to adjust the sensors found on either side of the rail's front section.

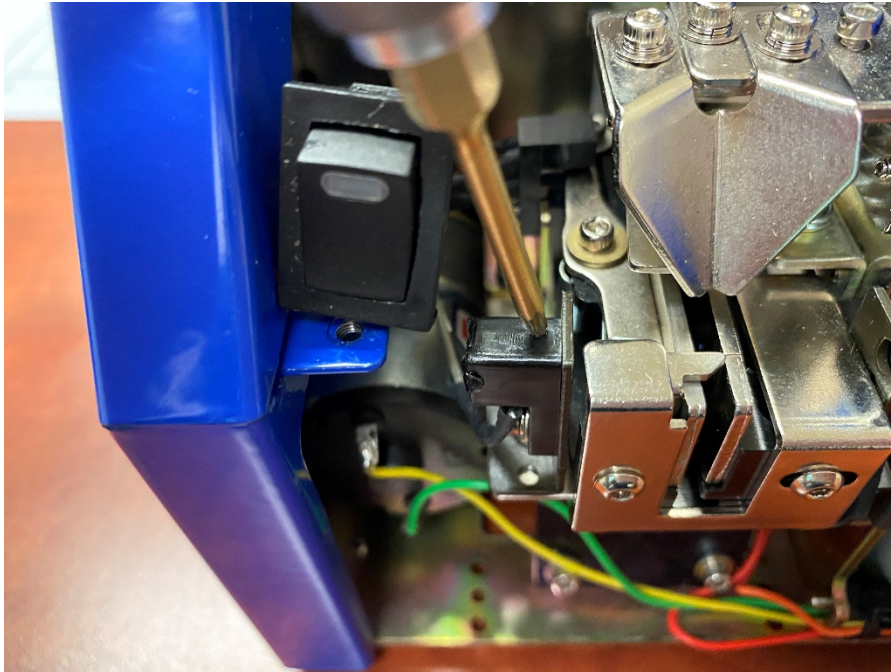

The sensors should be in matching positions on both side of the rail and aligned with the front portion of the rail where a screw rests after being fed.

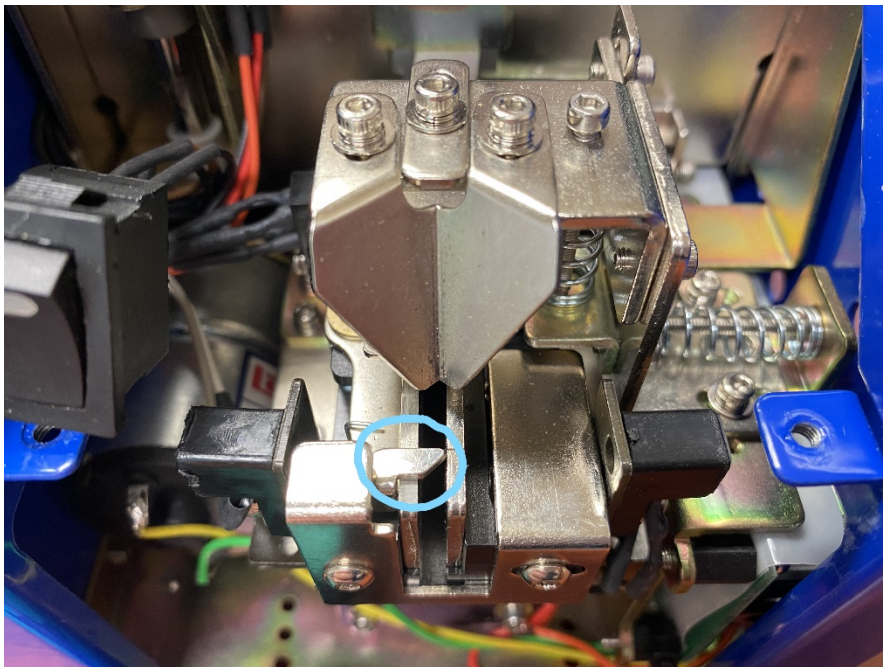

After this is complete turn the presenter back on and check to make sure the adjustments work